



# User Manual

## GMA200-MW

(Preliminary version, updated August 2013)

Gas detection controller for wall mounting



# Table of contents

|   | Page     |
|---|----------|
| <b>1. INTRODUCTION</b>  | <b>4</b> |
| 1.1 For your safety   | 4        |
| 1.2 Application and purpose   | 4        |
| 1.3 Special conditions for safe application                           | 4        |
| <b>2. GAS DETECTION CONTROLLER GMA200-MW16</b>                        | <b>5</b> |
| 2.1 General description   | 5        |
| 2.2 Device design   | 5        |
| 2.2.1 LED status displays   | 5        |
| 2.2.2 Graphical display   | 6        |
| 2.2.3 Visual and acoustic alarm                                       | 6        |
| 2.3 Internal relays of the GMA200-MW16                                | 6        |
| 2.4 External relay with the relay module GMA200-RT                    | 6        |
| 2.5 Relay configuration   | 6        |
| <b>3. ASSEMBLY AND INSTALLATION INSTRUCTIONS</b>                      | <b>7</b> |
| 3.1 Site of installation  | 7        |
| 3.2 Electrical connections  | 7        |
| 3.2.1 Safety information  | 7        |
| 3.2.2 Mains connection and separator                                  | 7        |
| 3.2.3 Floating relay contacts   | 7        |
| 3.2.4 External 24 V DC voltage supply                                 | 8        |
| 3.2.5 Connection of transmitters with an analogue interface           | 8        |
| 3.2.6 Connection of transmitters with a digital interface (RS485)     | 8        |
| 3.2.7 Connection of further devices with a digital interface (RS485)  | 8        |
| 3.2.8 Using the alarm acknowledgement inputs                          | 8        |
| 3.2.9 Using the 4-20 mA current outputs                               | 8        |
| 3.3 Commissioning   | 8        |
| <b>4. OPERATING INSTRUCTIONS</b>                                      | <b>9</b> |
| 4.1 Measuring mode  | 9        |
| 4.2 Alarms  | 9        |
| 4.2.1 Alarm configuration   | 9        |
| 4.2.2 Alarm acknowledgement (Reset)                                   | 9        |
| 4.3 Relays  | 10       |
| 4.4 Faults  | 10       |
| 4.5 Data logger function (configured using the GMA200Config software) | 10       |

|           |   |           |
|-----------|---|-----------|
| 4.6       | Analogue outputs  | 11        |
| <b>5.</b> | <b>KEYBOARD AND MENUS</b>                                       | <b>11</b> |
| 5.1       | Operation and menu navigation                                   | 11        |
| 5.2       | Main menu   | 12        |
| 5.3       | Service menu  | 12        |
| <b>6.</b> | <b>ANNEX</b>  | <b>12</b> |
| 6.1       | Cleaning and care   | 12        |
| 6.2       | Maintenance and service   | 12        |
| 6.2.1     | Visual inspection   | 13        |
| 6.2.2     | Functional testing  | 13        |
| 6.2.3     | System check  | 13        |
| 6.2.4     | Repair  | 13        |
| 6.3       | Spare parts and accessories                                     | 13        |
| 6.4       | Information on the environmentally sound disposal of used parts | 13        |
| 6.5       | Technical data  | 14        |
| 6.6       | EC declaration of conformity                                    | 15        |

# **1. Introduction**

## **1.1 For your safety**

This user manual states the intended use of the product according to § 3 of the German Product Safety Act (ProdSG) and helps to prevent hazards.

It must be read and observed by all persons who operate, service, maintain and inspect this product. This product can serve its intended purpose only if it is operated, serviced, maintained and inspected according to the instructions given by GfG Gesellschaft für Gerätebau mbH.

Otherwise, the warranty provided by GfG Gesellschaft für Gerätebau mbH becomes void. Settings in service mode should only be carried out by experts.

## **1.2 Application and purpose**

The GMA200-MW16 is a gas detection controller for wall mounting. Combined with connected transmitters, it forms a fixed gas warning system for the continuous measurement of gas concentrations and is used to issue a warning about combustible gases or vapours in the range below the lower explosion limit and about toxic gases in the ambient air, as well as to measure oxygen. External relay modules GMA200-RT are additionally available.

The GMA200Config software program is required to configure the controller GMA200-MW16 and the relay module GMA200-RT.

The configuration software GMA200Config is not described in this user manual. (See UM 222-000.30).

The relay module GMA200-RT/RTD is not described in this user manual. (See UM 222-000.24).

Operation and maintenance of the various transmitters are described in separate user manuals.

## **1.3 Special conditions for safe application**

According to the requirements stipulated, e.g., by DIN EN 60079-29-1 section 4.2.3.2, DIN EN 45544 and DIN EN 50104 at least one alarm threshold with self-locking must be configured for potentially hazardous gas concentrations.

At least one internal relay must also be configured as the collective message for all measuring point faults (FLT-TRM) and for GMA faults (FLT-GMA).

## 2. Gas Detection Controller GMA200-MW16


### 2.1 General description

The design of the gas warning controller GMA200-MW16 ensures flexible, simple and clearly structured operation in industrial and commercial applications for measuring combustible and toxic gases/vapours, and for measuring oxygen concentrations.

Using the GMA200Config software program, it is possible to quickly and easily configure measuring points and relays even when extending already installed GMA200-MW gas warning systems. Measuring point designation, transmitter type, gas type and measuring range, as well as three individual or specified alarm thresholds, can, e.g., be configured for each measuring point.

### 2.2 Device design

Up to 16 transmitters with 4-20 mA or 0.2-1 mA output can be connected to the analogue inputs of the gas detection controller GMA200-MW16. A microprocessor evaluates the analogue input signals of the connected transmitters, and a clearly structured display and LEDs indicate the status of the gas detection controller, each measuring point and the relays.

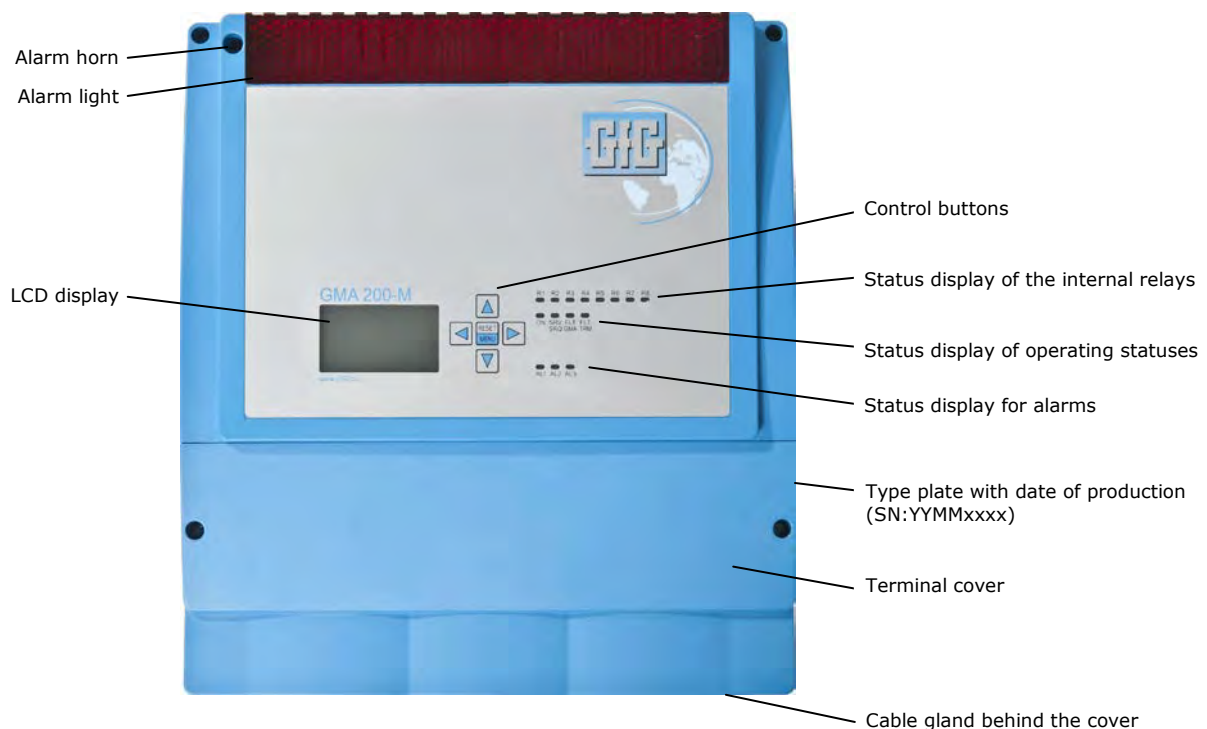



#### 2.2.1 LED status displays

During operation, LED status displays at the gas detection controller GMA200 indicate the following statuses according to the event:

|  |          |
|--|----------|
| - Operating status (ON)                            | → green  |
| - Alarm 1 (AL1)                                    | → red    |
| - Alarm 2 (AL2)                                    | → red    |
| - Alarm 3 (AL3)                                    | → red    |
| - Service (SRV/SRQ) required                       | → yellow |
| - Fault (FLT) GMA                                  | → yellow |
| - Fault (FLT) TRM                                  | → yellow |
| - Relay 1 (R1) – Relay 8 (R8)                      | → red    |
| (Relay activated in the case of an alarm or fault) |          |

## 2.2.2 Graphical display

Currently measured values are shown on the display for each measuring point. The display for the measuring points can be optionally set via the menu navigation (also see section 5.1), e.g.:

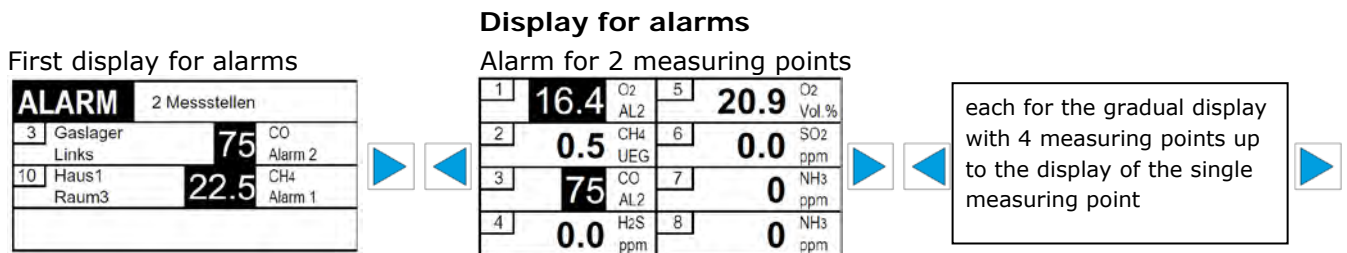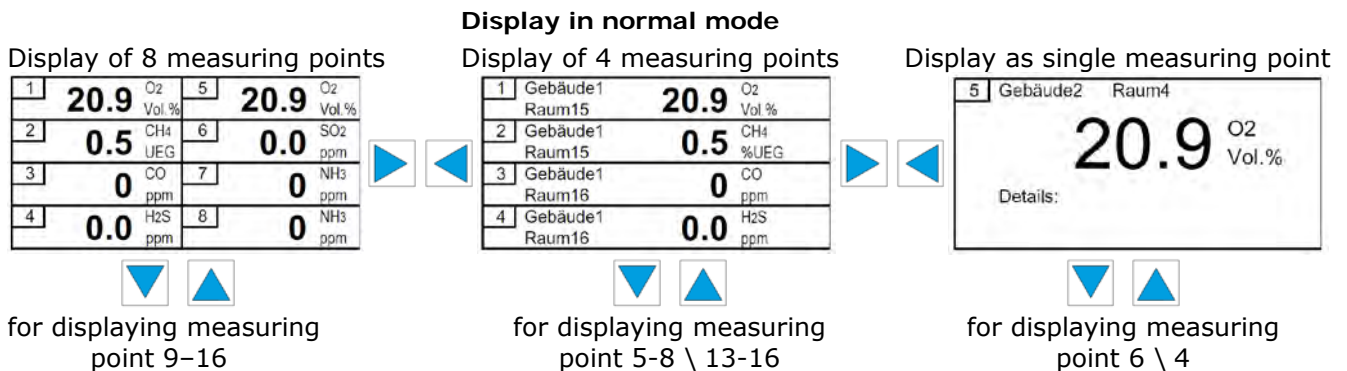

The graphical display is backlit; the light intensity can be increased via any control button. In the event of a gas alarm or faults, the display lighting is automatically activated with a red background.

## 2.2.3 Visual and acoustic alarm

An alarm light and a horn for central visual and acoustic alarm are integrated in the wall mounting housing GMA200-MW16 and triggered when the assigned alarm configuration for one or several measuring points is exceeded or not achieved (for alarm configuration, see section 4.3).

## 2.3 Internal relays of the GMA200-MW16

The gas detection controller GMA200-MW16 features a total of 8 relays. In order to realise specified safety measures and alarms, 6 relays can be freely configured using the GMA200Config software program. An additional relay is available for each controller as a safety-related fault message and maintenance relay.

## 2.4 External relay with the relay module GMA200-RT

The relay module GMA200-RT enables the addition of a further 16 freely configurable relays. A total of 4 relay modules with 64 additional relays can be managed via the controller GMA200-MT. The relay modules RT are connected to the controller GMA200 via the digital interface RS485 which also enables the spatial separation of the relay modules (max. 1,000 m).

The relay module is not described in this user manual (see UM 222-000.24).

## 2.5 Relay configuration

Configuration of the relays using the GMA200Config software offers extensive options, e.g. the allocation of individual or several measuring points to relays.

Configuration options:

- Single alarm per measuring point and alarm threshold
- Configuration of And/Or conjunctions
- Collective or group alarms
- Fault messages
- Voting functions
- Open-circuit principle / Closed-circuit principle


## 3. Assembly and Installation Instructions

### 3.1 Site of installation

The GMA200-MW16 is intended for indoor wall mounting and should not be installed in potentially explosive atmospheres. It should be installed in areas with as little vibration as possible. The voltage supply and transmitters are connected according to the terminal assignment diagram which is also located inside the terminal cover.

### 3.2 Electrical connections

The voltage supply and transmitters are connected according to the terminal assignment diagram which is also located inside the terminal cover.

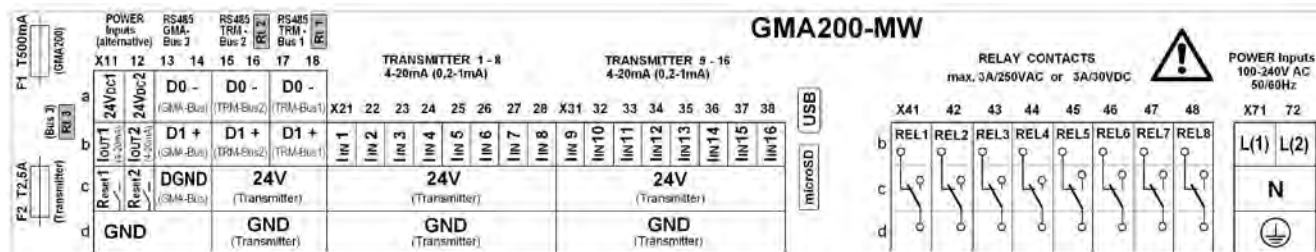

If the terminal cover is opened, various positions inside the GMA200-MW16 are marked with symbols. The symbols have the following meaning:



**General warning**  
see user manual



**Risk of electric shock**



**Protective conductor connection**

#### 3.2.1 Safety information



Electrical installation must always be carried out to DIN VDE 0100 or a similar country-specific standard. Cables with hazardous live voltages, e.g. 230 V AC, and cables with non-hazardous live voltages, e.g. 24 V DC, must be laid separately. The applied cables must be suitable for the connected transmitters or devices.

If the terminal cover of the GMA200-MW16 must be opened during operation due to maintenance work, please note that hazardous live voltages may be present at the relay connection terminals X41-48 and the mains connection terminals X71-72. Never come into contact with these terminals.

#### 3.2.2 Mains connection and separator



If the GMA200-MW16 is supplied with mains voltage (100..240 V AC) via terminals X71 or X72, install a separator in the supply line. This separator must comply with the requirements of IEC60947-1 and IEC60947-3, and must be clearly marked as a separator of the GMA200-MW16 and be accessible. The mains supply line must have a line cross section of at least 0.75 mm<sup>2</sup> and be protected by a suitable overcurrent protection device. The protective conductor must at least have the same cross section as the L and N conductors, and is connected at terminal X71d or X72d to the terminal marked with the protective conductor symbol.

#### 3.2.3 Floating relay contacts



Additional external warning equipment, e.g. control lamps, acoustic signal transmitters, etc., can be connected to the terminals X41-48 (contacts of the relays 1-8). The contacts of the adjacent relays 1&2, 3&4, 5&6 and 7&8 should only be operated with the same voltage category.

Hazardous live voltages (e.g. 230 V AC) and protective extra-low voltages (e.g. 24 V DC) should not be connected together at these adjacent relays.

### 3.2.4 External 24 V DC voltage supply

The GMA200-MW16 can optionally be operated with an installed power supply unit or with an external 24 V DC power supply. If external 24 V DC voltage is available and should be used to supply the GMA200-MW16, it is connected via terminal X11a or, with a redundant design of the supply voltage, via terminal X11a and X12a to the terminal marked 24 V DC1 or 24 V DC2 and to GND.

### 3.2.5 Connection of transmitters with an analogue interface

16 gas transmitters with an analogue 4-20 mA or 0.2-1 mA interface can be connected at terminals X21-38 to the GMA200-MW16. Three terminals (IIN, 24 V, GND) are available for each transmitter. The wire cross section depends on the power consumption of the transmitter and the length of the cable. Please refer to the user manual of the connected transmitters for detailed information.

### 3.2.6 Connection of transmitters with a digital interface (RS485)

Transmitters with a digital interface can be connected to terminals X17-18 (TRM- Bus1) or X15-16 (TRM Bus2). Four terminals (GND, 24 V, DO-, D1+) are available per transmitter bus. The total power consumption of all connected transmitters should, however, not exceed 2.4 A.

### 3.2.7 Connection of further devices with a digital interface (RS485)


In order to extend the GMA200-MW16 with additional relays, further relay modules can be connected to terminals X17-18 (TRM Bus1), X15-16 (TRM Bus2) or X13-14 (GMA Bus). If the GMA Bus is used for this extension, it must be configured as the master (addr.0).

In order to further process the measuring data of the GMA200-MW16, a central unit or a respective Bus interface can be connected to terminals X13-14 (GMA Bus). In this case, the GMA Bus connection must be configured as the slave (addr.1...255).

### 3.2.8 Using the alarm acknowledgement inputs

Two freely configurable alarm acknowledgement inputs (Reset1, Reset2) are located at terminals X11c and X12c for connecting external acknowledgement buttons.

This type of input must be connected to GND to acknowledge alarms.

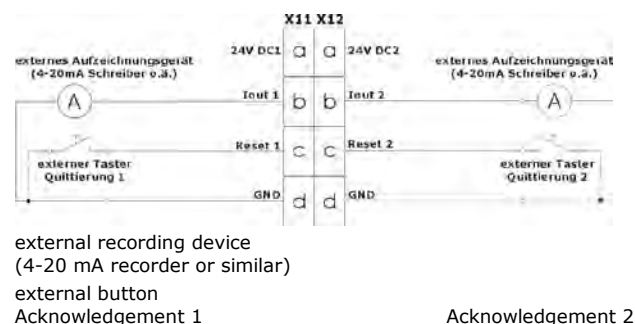

### 3.2.9 Using the 4-20 mA current outputs

Two freely configurable 4-20 mA power outputs (Iout1, Iout2) are located at terminals X11b and X12b. External recording equipment or recorders can be connected to these outputs to GND (see figure in section 3.2.8).

## 3.3 Commissioning

Commissioning can commence after assembling the GMA200-MW16 as well as all the transmitters and additional control modules, and once the voltage supply has been connected.

The gas warning system must be inspected and commissioned by an expert after installation. Inspections must be carried out in accordance with the manufacturer's instructions and executed by a fully trained and qualified expert. The expert must record the result in writing (see data sheet T023/2009, section 8.1 and DIN EN 60079-29-2, section 8.9). GfG service technicians as well as experts authorised by us are at your disposal.



## 4. Operating Instructions

### 4.1 Measuring mode

Normal measuring mode of the gas detection controller GMA200-MW16 is achieved approx. 10 seconds after connection to the voltage supply. Device readiness is indicated by a short optical signal.

Depending on the type of transmitter and its warm-up period, allocation to the respective measuring point "SRT" takes place in the display during the warm-up period. The warm-up period is usually between 1 and 2 minutes depending on the type of transmitter.

In normal measuring mode, all LEDs are inactive and the operation display ON lights up green. All configured measuring points (max. 8 measuring points, see section 2.2.2, Changes of the Display, see section 5) are shown in the display.

### 4.2 Alarms

Three alarm thresholds can be configured within the measuring range for each measuring point. If the alarm thresholds are exceeded or not achieved, the alarm LEDs AL1, AL2, AL3 (collective alarm display) and the integrated acoustic alarm are activated according to the status. Detailed information on the gas concentration level, the alarm status (AL1, AL2 or AL3) of the respective measuring point are simultaneously shown in the graphical display (see section 2.2.2).

The configured relays and the relay LEDs R1-R6 (typical configuration) are additionally activated according to the configuration.

#### 4.2.1 Alarm configuration

The following settings can be configured for each measuring point using the GMA200Config software:

- Alarm threshold Alarm 1 (can also be changed in the Main menu / Service menu)
- Alarm threshold Alarm 2 (can also be changed in the Main menu / Service menu)
- Alarm threshold Alarm 3 (can also be changed in the Main menu / Service menu)
- Alarm exceeded, self-locking
- Alarm exceeded, non-self-locking
- Alarm not achieved, self-locking
- Alarm not achieved, non-self-locking
- Alarm with switch-on delay (up to max. 3 minutes)
- Alarm with switch-off delay (up to max. 60 minutes)

#### 4.2.2 Alarm acknowledgement (Reset)

Non-self-locking alarm:

A non-self-locking alarm is automatically reset if the gas concentration is below (above) the alarm threshold and the assigned relay(s) is/are deactivated.

Self-locking alarm:

A self-locking alarm remains even if the gas concentration is below (above) the alarm thresholds. The alarm and the assigned relay(s) can only be acknowledged if the alarm threshold has not been achieved (has been exceeded).

Acknowledgeable alarm relays:

Relays can be configured as acknowledgeable and are reserved for connection to acoustic/optical messages only. Acknowledgement can occur via the Reset button at the controller module. Alternatively, acknowledgement is also possible via external reset inputs.

## 4.3 Relays

The GMA200-MW is equipped with 6 freely programmable relays (changeover contact) which can be configured using the GMA200Config software:

- Single alarm per measuring point and alarm threshold
- Fault messages
- And/Or conjunctions
- Collective or group alarms
- Voting function, e.g. 2 of 3 measuring points
- Open-circuit principle / Closed-circuit principle

Two additional relays are available as a safety-related fault message and for service or maintenance messages.

Up to four external relay modules (GMA200-RT) can be used for extension purposes (see section 2.4.).

Furthermore, the measuring point(s) and configuration is/are selected (AL1, AL2, AL3, fault) in the relay configuration to activate the integrated visual or acoustic alarm.

## 4.4 Faults

Fault messages are categorised as GMA controller faults and transmitter measuring point faults. Fault messages are non-self-locking.

**FLT/TRM** Transmitter or measuring point fault:

A fault can be caused, e.g., by a defective signal line or a defective transmitter.

**Note: Observe the respective information in the user manual of the connected transmitter.**

**FLT/GMA** GMA controller fault

Possible causes:

- Defective electronics
- Operating voltage has not been achieved
- Communication error to the external GMA modules (relay module GMA200-RT)
- One or more defective internal relays or external relays (relay module GM200-RT)
- Program error (error in the parameters, check sums, etc.)

Please contact our Service in the case of faults.

## 4.5 Data logger function (configured using the GMA200Config software)

The gas detection controller GMA200-MW16 can be equipped with a microSD card for saving measured values. The SD card must be removed and read out externally.

The following is permanently recorded at individually configured intervals:

Mean values – recording intervals: 5/10/15/20/30 seconds or  
1/2/3/5/10/15/20/30/60 minutes

Instantaneous values – recording intervals: 5/10/15/20/30/60 seconds




as well as alarm events and faults.

Depending on the configuration, the measured values are saved under a file name according to the calendar:







- Daily (file name: Year/Month/Day/Type\*) e.g. 13-0622M.txt
- Weekly (file name: Year/W/Calendar week) e.g. 13-W24M.txt
- Monthly (file name: Year/Month/Type\*) e.g. 13-06M.txt
- Annually (file name: Year/Type\*) e.g. 13-00M.txt

\*M= Mean value / A=Instantaneous value in the case of an alarm

**Important information: Prior to removing the SD card, stop or deactivate the data recording (also see the additional information on the service menu).**

- Activate the GMA200 menu by pressing and holding 
- Select "Status Datenlogger" (Status data logger); to acknowledge, press 
- Select "Stop Rec" (pause function) by pressing 
- The status (still available storage capacity) is also displayed in this menu item

Proceed as follows to deactivate the data recording:

- Select "Service Menü" (service menu) via 
- Enter the password (see section 5.3)
- Select "Datenlogger" (Data logger)  and acknowledge via 
- Activate the measured value recording 
- Deactivate the measured value recording 
- Press  repeatedly to exit the service menu

## 4.6 Analogue outputs

A 4-20 mA output can be configured for both of the 2 measuring points for transfer, e.g., to a superordinate control centre or for external measured value recording.

# 5. Keyboard and menus

Alarms are acknowledged and the main menu used via the clearly structured keyboard at the gas detection controller.

## 5.1 Operation and menu navigation

Menu navigation occurs via the control keyboard at the gas detection controller:

### Button Function when pressed:



Alarm acknowledgement for self-locking alarms (when the button is pressed briefly)  
Main menu activation (when the button is pressed >3 s).



Access detailed information in the main menu (see section 5.2), change the measured value display to single measuring point display, toggle from the alarm display function to display, select cursor position for entering the password in the service menu.



Toggle to menu items in the main menu, with single measuring point display to single view of other measuring points, toggle to total display (1-8, 9-16), select numerical values for entering the password in the service menu.




Function when pressed: Exit the detailed information in the main menu, exit the main menu, toggle the display to display of all measuring points, toggle the display function to alarm display function, select cursor position for entering the password in the service menu.



Function when pressed: Toggle to menu items in the main menu, with single measuring point display to single view of other measuring points, activate the auto-scroll function (10 s or 10 min, automatic change-over of the display), select numerical values for entering the password in the service menu.

## 5.2 Main menu

Press and hold down the  button to access the main menu. The main menu is divided into:

- Status GMA
- Status data logger
- Info GMA
- Info measuring points
- Info relays
- Info analogue outputs
- Tests (test LCD display, LED/horn, external switch)
- Service menu (password protected, see section 5.3)

User navigation in the main menu occurs via the keyboard at the controller GMA200 (see section 5.1).

## 5.3 Service menu

Access to the service menu is password protected and set to "0000" as standard upon delivery.

**Access to the service menu is locked if the controller is connected to the GMA200Config software. The connection must be disconnected first. The configuration cannot be changed if the service menu is active at the same time.**

The service menu is divided into:

- System settings  
Time/Date, Password, Language, BUS settings, Display contrast, Horn volume
- Data logger  
SD card: REC activation and deactivation of measured value recording
- Measuring points  
Change alarm thresholds, carry out fine adjustments, lock (deactivate the measuring points)
- Relays  
Test (electrical test of the relay function), lock (deactivate the relay), start the time control
- Analogue outputs  
Test, measuring point assignment

If settings are changed in the service menu, the following prompt is displayed when exiting the service menu:

**Note: Safety-relevant changes should only be carried out by authorised and expert staff.**



## 6. Annex

### 6.1 Cleaning and care

External soiling of the device housing can be removed using a cloth dampened with water when the device is de-energised. Do not use solvents or cleaning agents!

### 6.2 Maintenance and service

Maintenance and service include regular visual inspections, functional testing and system checks, as well as repairs to the gas warning system. (See DIN EN 60079-29-2 section 11 and, in Germany, the data sheets BGI 518 T023 and BGI 836 T021, section 9).

### 6.2.1 Visual inspection

Visual inspections should be carried out on a regular basis with a maximum interval of one month and include the following tasks:

- Check the operation display and the status messages,  
e.g. operation display "On", alarm and fault displays "Off"
- Check for mechanical damage and external soiling

### 6.2.2 Functional testing

Functional testing can be carried out at specific intervals, which depend on the gas hazard being monitored. With gas warning systems for explosion protection, the time limit is 4 months, and when measuring toxic gases and oxygen, the time limit is 6 months according to the requirements stipulated in the guidelines BGI 518 T023 and BGI 836 T021 of the German Berufsgenossenschaft BG RCI.

It includes the following tasks:

- Visual inspection according to section 4.2.1
- Testing and evaluation of the measured value displays
- Triggering the alarm thresholds
- Triggering the test functions for display elements as well as optical and acoustic signal transducers, without triggering switching functions
- Inspection of saved messages, faults and maintenance requirements

### 6.2.3 System check

The system check must be carried out at regular intervals. The time between intervals should not exceed 1 year. It includes the following tasks:

- Functional testing according to section 3.7.2
- Inspection of all safety functions, including triggering of switching functions
- Monitoring of parameterisation via target / actual comparison
- Inspection of signalling and registration modules

### 6.2.4 Repair

This includes all repair and replacement tasks. These tasks should only be carried out by the manufacturer and persons who have been authorised to do so by the manufacturer – GfG Gesellschaft für Gerätebau mbH. Only original spare parts and original modules inspected and approved by the manufacturer should be used.

## 6.3 Spare parts and accessories

|    | Description   | Order No. |
|----|---|-----------|
| 1. | microSD card 2 GB   | 2200202   |
| 2. | Spare slow-blow fuse T 500 mA (F1 for GMA200) PU=10 pieces                  | 2200301   |
| 3. | Spare slow-blow fuse T 2.5 A (F2 for transmitter supply) PU=10 pieces       | 2200303   |
| 4. | Screws for GMA200 wall housing PU=10 pieces                                 | 2200304   |
| 5. | Seal for GMA200-MW cable gland PU=20 pieces                                 | 2200305   |
| 6. | 75 W power supply unit GMA200-MW (input: 88-264 V AC output: 24 V DC/3.2A)  | 2200306   |
| 7. | 100 W power supply unit GMA200-MW (input: 88-264 V AC output: 24 V DC/4.2A) | 2200307   |
| 8. | Flat ribbon cable for GMA200-MW (L=33 cm)                                   | 2200308   |

## 6.4 Information on the environmentally sound disposal of used parts

According to section 11 of the General Terms and Conditions of the company GfG, the purchaser of the device agrees to dispose of the device or device components in an environmentally sound manner in line with sections 11 and 12 of the German Electrical and Electronic Equipment Act (ElektroG). If desired, GfG in Dortmund, Germany, can also carry out correct disposal.

## 6.5 Technical data

|   |   |
|---|---|
| <b>Type designation:</b>  | <b>GMA200-MW16</b>  |
| <b>Display &amp; control elements</b>   | 2.2" graphical display and 5 buttons<br>15 status LEDs for alarms, operating and relay statuses   |
| <b>Ambient conditions</b><br>For storage:<br>For operation:<br>Site of installation:                  | -25..+60 °C   0..99 % RH (recommended 0...+30 °C)<br>-20..+55 °C   0..99 % RH<br>only indoors<br>up to a height of 2,000 m above sea level  |
| <b>Power supply</b><br>Operating voltage:<br>Power consumption:<br>Fuses:                             | 100-240 V AC 50-60 Hz or/and<br>24 V DC (20-30 V DC permitted)<br>max.10 W (without transmitter)<br>max.90 W (with transmitter)<br>F1= slow-blow T 500 mA (for GMA200)<br>F2= slow-blow T 2.5 A (for transmitter)   |
| <b>Transmitter connections</b><br>Supply:<br>Analogue signals IIN1-16:<br>Digital signals TRM Bus1+2: | 24 V DC $\pm 3\%$ with installed power supply unit, otherwise 20-30 V DC (see above)<br>16x 150 mA or $I_{total}=2.4\text{ A}$ with other configuration<br>4-20 mA or 0.2-1 mA<br>(resistance approx. 50..100 $\Omega$ , $I_{max}=70\text{ mA}$ permanently / 500 mA temporarily)<br>RS485; half-duplex; max. 38,400 Baud   |
| <b>RS485 outputs</b><br>TRM Bus1+2:<br>GMA Bus:   | RS485; half-duplex; max. 38,400 Baud<br>(for GMA200 relay modules only)<br>RS485; half-duplex; galvanically isolated; max. 230,400 Baud<br>(for GMA200 relay modules, control centre, PC, PLC or Gateway)   |
| <b>Relay outputs</b><br>Contacts:<br>Contact rating:<br>Insulation distances:                         | 8 relays each with a changeover contact<br>3 A / 250 V AC or 3 A / 30 V DC<br>Basic insulation between the relays: 1&2, 3&4, 5&6, 7&8<br>Double insulation between the relays: 2&3, 4&5, 6&7  |
| <b>Analogue outputs</b><br>IOUT1+2:   | 4-20 mA (resistance max.560 $\Omega$ )  |
| <b>Alarm acknowledgement inputs</b><br>Reset1+2:  | 0-3 V DC (alarm acknowledgement occurs at contact with GND;<br>$U_{MAX}=30\text{ V DC}$ )   |
| <b>Data logger</b> (optional)   | 2 GB microSD card with FAT (FAT16) format   |
| <b>USB connection</b>   | Mini USB port for device configuration via PC   |
| <b>Connection cables</b><br>Cable glands:<br>Terminal blocks:<br>Cable:                               | max. 20 pieces M16x1.5 (for cable cross section of 4.5-10 mm)<br>0.8..2.5 mm <sup>2</sup> cross section<br>3-4-wire $\geq 0.75\text{ mm}^2$ LiYY, NYM (for GMA200 supply)<br>2-4-wire 0.5-1.5 mm <sup>2</sup> LiYY, LiYCY (for transmitter)<br>2-wire 1 x 2 x 0.22 mm <sup>2</sup> BUS-LD (for GMA Bus with a length >10 m) |
| <b>Housing</b><br>Protection class:<br>Material:<br>Weight:<br>Dimensions:                            | IP65<br>Plastic<br>approx. 2.0 kg<br>270 x 290 x 98 mm (W x H x D)  |
| <b>Approvals/Tests</b><br>Electromagnetic compatibility:<br>Electrical safety:                        | EN 50270:2006<br>DIN EN 61010:2010<br>Emitted interference: Type class I<br>Interference resistance: Type class II<br>Degree of soiling 2<br>Overvoltage category II for mains power supply<br>Overvoltage category III for relay contacts  |

**Technology for people and the environment**



GfG Gesellschaft für Gerätebau mbH  
Klönnestr. 99 – 44143 Dortmund,  
Germany  
Tel.: +49(0)231 – 564 00-0  
Fax: +49(0)231 – 51 63 13  
E-mail: [info@gfg-mbh.com](mailto:info@gfg-mbh.com)  
Internet: [www.gasmessung.de](http://www.gasmessung.de)

222-000.22\_UM\_GMA200-MT.doc, Updated: 22 August 2013,  
Details subject to change, Firmware Version 1.43/1.83


## 6.6 EC declaration of conformity

### EG-Konformitätserklärung

**GMA200-MW16**

### GfG Gesellschaft für Gerätebau mbH

Klönnestrasse 99  
44143 Dortmund  
Tel: +49 (231) 56400-0  
Fax: +49 (231) 516313  
E-Mail: [info@gfg-mbh.com](mailto:info@gfg-mbh.com)  
[www.gasmessung.de](http://www.gasmessung.de)  
[www.gfg.biz](http://www.gfg.biz)

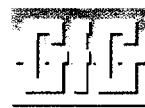

Erstellt: 12.04.2013

Geändert:

Die GfG Gesellschaft für Gerätebau mbH entwickelt, produziert und vertreibt Gassensoren und Gaswarnanlagen unter Anwendung eines **Qualitätsmanagementsystems** nach DIN EN ISO 9001. Überwacht wird die Produktion von elektrischen Betriebsmitteln der Gerätegruppen I und II, Kategorien M1, M2, 1G und 2G für Gassensoren, Gasmessgeräte, Gaswarnanlagen in den Zündschutzarten Druckfeste Kapselung, Erhöhte Sicherheit, Vergusskapselung und Eigensicherheit mit deren Messfunktion mit Hilfe eines **Qualitätssicherungssystems** – Zertifikats-Nr. BVS 03 ATEX ZQS / E 187 - durch die benannte Stelle, DEKRA EXAM GmbH.

Der Gasmesscomputer **GMA200-MW16** entspricht der **Richtlinie 2004/108/EG** für die elektromagnetische Verträglichkeit und der **Richtlinie 2006/95/EG** für Niederspannungen.

**Kennzeichnung**

CE

Die Richtlinien wurden unter Berücksichtigung der folgenden Normen eingehalten:

#### ▪ Elektromagnetische Verträglichkeit

- Elektrische Geräte für die Detektion und Messung von brennbaren Gasen, toxischen Gasen und Sauerstoff. EN 50270
- Störaussendung: Typ 1
- Störfestigkeit: Typ 2

#### ▪ Elektrische Sicherheit

- Sicherheitsbestimmungen für elektrische Mess-, Steuer-, Regel- und Laborgeräte. Allgemeine Anforderungen. EN 61010-1

Mit der Prüfung und Bewertung der elektromagnetischen Verträglichkeit wurde das EMV Messlabor EM TEST GmbH, Kamen beauftragt. Mit der Prüfung und Bewertung der elektrischen Sicherheit wurde das Ingenieurbüro du.tronic Consulting & Engineering, Ratingen beauftragt.

Die Sicherheitshinweise in der Betriebsanleitung 222-000.22 sind zu beachten.

Dortmund, den 12.04.2013

.....  
Dipl. Kfm. H.J. Hübner  
Geschäftsführer